

User Manual

- V1705

Table of Contents

1 OVERVIEW	6
Your Phone	6
Keys and Functions	7
Screen Icons.....	8
2 GETTING STARTED	9
Removing the Battery cover	9
Installing a micro SD Card	9
Installing the SIM Card the Battery	9
Installing the battery.....	9
Putting the battery over.....	9
Power on the handset.....	9
Charging the Battery.....	9
Using the Function Menu.....	10
Phone Lock.....	11
PIN and PUK	11
Locking the Keypad	11
3 VOICE SERVICES	12
Making a Call.....	12
Answering a Call.....	12
4 TEXT ENTRY	13
Changing the Text Input Modes.....	13
Multi-tap Text Input	13
Smart Input Mode	13
Entering Digits	13
Entering Symbols.....	13
5 CALL HISTORY	14
SIM1 Call history/ SIM2 Call history	14
6 PHONEBOOK.....	15
Creating a Contact.....	15
Searching for a Contact.....	15
Phonebook option.....	15

7 USER PROFILES.....	26
Generals	16
Meetings	16
Outdoors	16
indoors	16
Headset	16
Bluetooth.....	16
8 WAP	17
Network Settings.....	17
Connecting to the Network	17
9 MESSAGING.....	18
Writing and Sending a Text Message	18
Writing and Sending a Multimedia Message	18
Emails.....	18
Broadcast messages	18
10 MULTIMEDIA	20
Taking a Photo	20
Recording a Video Clip	20
Playing a Video Clip.....	20
Listen to the FM Radio.....	21
Playing Music.....	21
Recording an Audio Clip	21
Melody composer	22
11 ORGANIZER.....	23
File Manager.....	23
Calendar	23
Tasks.....	23
Alarm	23
Calculator.....	23
Currency Converter.....	24
World Clock	24

E-book reader.....	24
Synchnonization	24
Phone sync.....	24
Stop watch	24
12 FUN & GAMES.....	26
MSN	26
Skype.....	26
Yahoo messenger.....	26
Games	26
13 SETTINGS.....	27
Phone setting.....	27
Time and date	27
Schedule power on /off.....	27
Display	27
Call Setting	27
Smart Divert settings	27
SIM1/SIM2 Call setting	27
Voice Changer	27
Blacklist.....	27
Background sound.....	27
Call time display.....	27
Call time reminder.....	27
Auto quick end	27
Reject by SMS	27
SecuritySetting.....	27
Phone lock	28
Auto keypad lock	28
Secure –info protection.....	28
Change password.....	28
Bluetooth.....	28



 
Synchronizing Data.....	28
Using a Bluetooth Headset.....	29
Transferring Data.....	29
Web cam.....	29
14 WARNINGS AND PRECAUTIONS.....	30
15 DISCLAIMER	35



1 OVERVIEW

YOUR PHONE

The following figure is a sketch of the phone. The actual product may differ.

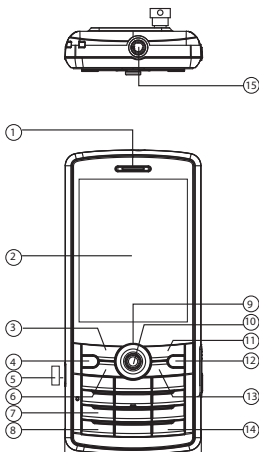













1 Earpiece	6 Calling key	11 Right soft key
2 Screen	7 Number keys	12 FM key
3 Left soft key	8 * key	13 Ending key
4 MP3 key	9 Direction keys	14 # key
5 Connection jack	10 Ok key	15 Headset jack





KEYS AND FUNCTIONS

Press	To
Calling key	<ul style="list-style-type: none">• Make a call.• Answer an incoming call.• View Call Logs of SIM1/ SIM2 card in standby mode.
Ending key	<ul style="list-style-type: none">• Power on or power off the phone (by pressing and holding it for about 3s).• End a call, or reject an incoming call.• Return to standby mode.
Left soft key	<ul style="list-style-type: none">• View Call Logs of SIM2 card in standby mode.• Select the highlighted item.
Right soft key	<ul style="list-style-type: none">• Display Phonebook list in standby mode.• Return to the previous menu.
Direction keys	<ul style="list-style-type: none">• Access: Calendar(Up direction key), Phonebook(Down direction key), Write Message(Left direction key), and Alarm(Right soft key) in standby mode.• During a call, increase the volume (Up direction key) or decrease the volume(Down direction key).• In standby mode, press OK key to access Menu in standby mode.• Press OK key to confirm a selection.
Number keys	<ul style="list-style-type: none">• Enter numbers, letters, and characters.• Call the voice mail center in standby mode (by pressing and holding the 1 key for about 3s).• Speed-dial phone numbers in standby mode (by pressing and holding the 2–9 keys for about 3s).• Select a submenu item labeled with the corresponding number.
* key	<ul style="list-style-type: none">• In standby mode, press the key once to enter *, twice to enter +, three times to enter P, and four times to enter W.• Display the symbol list in any input mode.
# key	<ul style="list-style-type: none">• Enter #.• Enable or disable the Silent mode in standby mode (by pressing and holding it for about 3s).• Change input modes when editing texts.

SCREEN ICONS

Icon	Indicates
	Signal strength.
	A new text message is received.
	A new multimedia message is received.
	The call forwarding function is enabled.
	An alarm is activated.
	The keypad is locked.
	Battery power level.
	The headset is being used.
	The General profile is activated.
	The Outdoor profile is activated.
	The Silent profile is activated.
	Missed call(s).

    2 GETTING STARTED

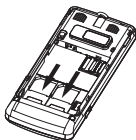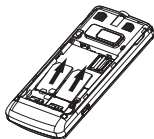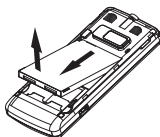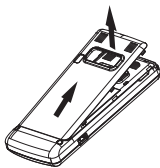

REMOVING BATTERY COVER

Before removing the battery and the SIM card, ensure that your phone is power on/ off.

Lift the Battery Cover toward upward direction from the top edge of phone as mention below.

REMOVING THE BATTERY FROM THE COMPARTMENT

Locate the battery groove at the side bottom of the battery compartment, Lift the battery up with your fingers Remove the battery out from the phone

 
 
 
INSTALLING A MICRO SD CARD

You can insert a micro SD card to expand the memory capacity of your phone. Locate the Memory Card slot at the bottom of battery compartment.

Push the Memory Card cover in right direction to unlock and pull it upwards to open Place the Memory Card into Memory Card slot with the metal connectors of the Memory Card facing down Close the Memory Card cover and push it in left direction to lock the Memory Card cover

INSTALLING THE SIM CARD AND THE BATTERY

You can install two SIM cards on the phone at the same time. When installing a SIM card, ensure that the golden contact area on the SIM card is facing downward, and the beveled edge of the SIM card is properly aligned with that of the card slot.

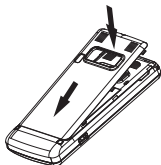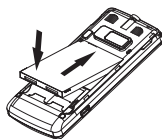

INSTALLING THE BATTERY

Slide the battery into the compartment in such an way that the metal connectors of the battery are aligned with the metal connectors of the phone

Push the battery down into the compartment and ensure that the battery is securely placed in the compartment.

PUTTING THE BATTERY COVER

Place the battery back cover over the phone squarely with bottom side dent fitted to the groove the phone.

POWER ON THE HANDSET

Press the power key/End key and keep it pressed for about 3-5 seconds to Switch on the phone.

CHARGING THE BATTERY

1. Connect the charger to a power socket.
2. Connect the charger to the charger jack on the phone.
3. Wait until the battery is completely charged. During the charging, the charging icon is displayed in animation. When the charging icon becomes static, the battery is fully charged.
4. Disconnect the charger from the phone.
5. Disconnect the charger from the power socket.



USING THE FUNCTION MENU

1. In standby mode, press **LSK(Calls)**.
 2. Press **Direction keys** to select the desired function menu.
 3. Press **LSK(OK)** or **OK key** to display the selected menu.
 4. Press **Up/Down direction keys** to select a submenu.
 5. Press **LSK(OK)** or **OK key** to display the submenu.
 6. Press **RSK(Back)** to return to the previous menu or exit the function menu.
- To return to standby mode, press **Ending key**.

PHONE LOCK

The phone lock protects your phone from unauthorized use. By default, the phone lock function is disabled. You can change the default phone lock code (**0000**) into any numeric string in the range of four to eight digits.

Do remember your phone lock code. If you forget it, contact the service center.

PIN AND PUK

The personal identification number (PIN) protects your SIM card from unauthorized use. The PIN unblocking key (PUK) can unlock the blocked PIN. Both PIN and PUK are delivered with the SIM card. For details, consult your service provider.

If you enter wrong PINs for a specified number of times consecutively, the phone asks you to enter the PUK.

LOCKING THE KEYPAD

In standby mode, press the LSK and then * **key** to lock the keypad, and press the **LSK** then * **key** again to unlock the keypad.

If the **Auto Keypad Lock** function is enabled and the phone is idle for a preset period in standby mode, the keypad is locked automatically.



Note:

When the keypad is locked, you can press the Calling key to answer an incoming call or make emergency calls.



3 VOICE SERVICES

MAKING A CALL

1. In standby mode, enter the phone number.
 - To make an international call, press * **key** twice consecutively to enter the plus sign (+). Then enter the international long distance code, country code or region code, area code, and phone number in sequence.
 - To call an extension, enter the phone number, press * **key** three times consecutively to insert **P**, and then enter the extension number.
2. Press **Calling key** to dial the number.
3. Press **Ending key** to end the call.



Note:

- You can also make a call through Call History, Phone Book, and Message.
- During a call, press Up/Down direction keys to adjust the volume.

ANSWERING A CALL

When there is an incoming call, you can do as follows:

- Press **Calling key** to answer it.
- Press **Ending key** to reject it.
- Press **RSK(Silent)** to mute the speaker, and then press **RSK(Reject)** again to reject it.
- Press **LSK(Options)** and then select **Answer** to answer it.

If the **Any Key** answer function is enabled, you can press any key except **LSK** and **Ending key** to answer an incoming call.

4 TEXT ENTRY

CHANGING THE TEXT INPUT MODES

Your phone support the following text input modes. The indicator of the current text input mode is displayed on the screen. You can press # key to change the text input mode.

Icon	Text Input Mode
ABC, abc	Multi-tap
eZi ABC, eZi abc	Smart
123	Number



Note:

- In editing mode, press RSK(Clear) once to delete the character to the left of the cursor; press and hold RSK(Clear) to clear all characters at a time.
- In multi-tap text input mode, press 1 key consecutively to enter a commonly used punctuation.
- In smart text input mode, press 1 key and then press Direction keys to enter a commonly used punctuation.
- In multi-tap text input mode, press 0 key to enter a space and twice to enter 0. In smart text input mode, press 0 key to enter a space.
- In smart text input mode, press Direction keys to scroll through the predicted words.

MULTI-TAP TEXT INPUT

In multi-tap text input mode, you can press a key labeled with the desired letter once to enter the first letter on the key, twice to enter the second letter on the key, and so on.

SMART INPUT MODE

In Smart text input mode, do as follows to enter an English word:

1. Press each key only once according to the spelling sequence of the desired word. The phone displays the commonly used words according to the numeric sequence of key presses.
2. Press **Direction keys** to scroll to the desired word.
3. Press **OK key** to enter the word.

ENTERING DIGITS

- In "123" input mode, you can directly press number keys labeled with desired digits.
- In multi-tap text input mode, press the number key consecutively until the desired digit appears on the screen.
- In smart text input mode, press the number key labeled with the desired number and then press Direction keys until the number appears.

ENTERING SYMBOLS

1. Press *** key** to display the symbol list.
2. Press **Direction keys** to scroll to the desired symbol.
3. Press **OK key** to enter the symbol.

5. CALL HISTORY

SIM1/ SIM2 Call history

You can view SIM 1's/SIM 2's information related to call records, including Missed Calls, Dialed Calls, Received Calls, Delete Call Log, Call Time, Call Cost, SMS Counter and GPRS Counter. If you have inserted only one SIM card, you can see only one of the SIM card's phone records.



6 PHONEBOOK

You can store information such as names, phone numbers, and e-mail addresses in the phonebook. Phone numbers can be stored in your mobile phone or SIM card. The mobile phone can store up to 1200 records, the amount of phone numbers that SIM card can store vary with its capacity. In standby state, you can access this interface with the help of right soft key.

CREATING A CONTACT

1. Select **Menu > Phonebook > Add new contact**.
2. Press **OK** key to edit the contact.
3. Press **OK** key to save the contact.
4. Press **LSK(Yes)** to save the contact; press **RSK(No)** to exit.

SEARCHING FOR A CONTACT

1. Select **Menu > Phonebook**.
2. Enter the first character of the contact.
3. Press **Up/Down direction keys** to search the required contact.

PHONEBOOK OPTION

Very useful function is present in phone book option in Phonebook-> option menu as mention below.

Delete: You can delete entries from the SIM card and Phone.

Copy: you to copy entries both from the SIM card to Phone / Other SIM and vice versa.

Send contact: Send contacts

Move: You can Move entries from the SIM card and Phone.

Send Contacts: you can send contacts As text messages, As multimedia messages, As Email, Via Bluetooth.

Add to Black list: You can add contact to Blacklist.

Caller Groups: You Can group you contact to different group. ie Friends, Family VIP, Business, Others

Phonebook Setting: you can use different setting of your Phonebook.





7 USER PROFILES

You can select your own user profile for the phone.

Select **Menu > Settings > User Profiles**, to access different profiles.

- General
- Meeting
- Outdoor
- Indoor
- Headset
- Bluetooth

You can activate and customize them as per your need. Activate enables to select a particular profile and activate it. Customize enables to set Tone setup, Volume, Alert type, Ring type, Extra tone and Answer mode.





8 WAP

You can access WAP sites and use WAP-based services on your phone. To access the WAP sites through your phone, you need to subscribe the corresponding service from the service provider and set the relevant parameters on your phone first.

For details about the service and the charges, contact your service provider.

NETWORK SETTINGS

To access the WAP sites through your phone, you need to set the data account and WAP parameters on your phone first.

SETTING THE DATA ACCOUNT

1. Select **Menu > Services > Data Account > GPRS/GSM data**.
2. Select your service provider, and then press **LSK(Options)** and then Edit.
3. Set the account information.
4. Press **LSK(Options)** and then select Done.
5. Press **RSK(Done)** to save the settings.

SETTING THE WAP

1. Select **Menu > Services > Internet services > Settings > Profiles**.
2. Select your service provider, and then press **LSK(Options)** and then select Edit profile.
3. To set the relevant parameters.
4. Press **LSK(Done)** to save the settings.

Connecting to the Network

You can browse WAP pages on your phone after setting the connection profile and WAP parameters.

1. Select **Menu > Services > Internet services > Input address**.
2. Input a WAP site address.
3. Press **LSK(Options)** and then select Done.

The browser will display the corresponding WAP page.



9 MESSAGING



Note:

- **Functions related** to the MMS and emails are network dependent. For provision of and subscription to a service, contact your service provider.
- Open multimedia messages and emails with caution. Objects in multimedia messages or emails may contain hazards that can damage your phone, such as malicious software.

WRITING AND SENDING A TEXT MESSAGE

1. Select **Menu > Messaging > Write message**.
2. Edit the text message.
3. Press **LSK(Options)** and then select Send to.
4. Input the recipients manually or select from the phonebook.
5. Press **OK key** and then select "From SIM1/SIM2" to send the message.

WRITING AND SENDING A MULTIMEDIA MESSAGE

1. Select **Menu > Messaging > Write message**.
2. Press **LSK(Options)** and then select Switch to MMS.
3. Press **LSK(Options)** and then select Add subject to edit the subject..
4. Edit the content of the message. You can add text content, images, sounds, videos, attachments, slides, and bookmarks to the multimedia message.
5. Press **OK key** to navigate to "Send MMS" screen, select a recipient and changes input method to abc to insert the Email address.
6. In "Send MMS" screen, press **OK key** to send the MMS.

EMAILS

Before sending or receiving emails, you need to create and activate an email account.

CREATING AN EMAIL ACCOUNT

1. Select **Menu > Messaging > Email > Email accounts**.
2. Press **LSK(Options)** and then select New account.
3. Set the related parameters in sequence.
After setting an item, press **LSK(Options)** and then select Next to proceed to set other items.
4. Press **LSK(Options)** and then select Done to save the email account.



ACTIVATING AN EMAIL ACCOUNT

1. Select **Menu > Messaging > Email > Email accounts**.
2. Select an email account.
3. Press **LSK(Options)** and then select Activate.

WRITING AND SENDING AN EMAIL

1. Select **Menu > Messaging > Email > Write Email**.
2. Select **To, Cc, or Bcc** to add the email address of a recipient.
3. Select **Subject** to edit the email subject.
4. Select **Attachment** to add an attachment. A maximum of three attachments can be added to an email.
5. Set the email priority.
6. Select **Content** to edit the text contents of the email.
7. After editing, press **LSK(Done)**.
8. Press **LSK(OK)** to select from the following options:
 - **Send:** to send the email.
 - **Send and save:** to send and save the email.

BROADCAST MESSAGE

Broadcast message enable You to receive messages related to your cell location information or the messages broadcast from your service provider (network service). Contact your service provider for more details.

Receive Mode: Enables to make receiving mode ON/OFF.

Read Message: Enables to read the messages received.

Langages: Enables to set out the preferred language.

Channel Settings: Enables to set out the preferred Channel.





10 MULTIMEDIA

TAKING A PHOTO

In standby mode, **select Menu > Multimedia > Camera** to launch the camera.

In picture mode, you can do as follows:

- Press **LSK** to view photos, or perform relevant settings.
- **Photos** :This option enables you to view the images from photo album.
- **Camera Setting**: you can set below option in camera setting

Camera LED: flash highlight on /off for flash light.

Shutter sound: you can set /customize sound produce during the photo click.

EV: set Exposure value for image quality for adjusting light condition.

Delay timer: Different delay timer are 5sec, 10 sec,15sec,off.

Cont shot: different cont shot are 5,3,1,off.

Image Setting:

you can set different image size(2048*1536,1600*1200,1280*1024,640*480,240*320).

White balance: you can set your photo cooler or warmer by adjusting the white balance.

Scene mode: You can set scene mode of own choice.

Storage : you can set Phone memory or memory card to store capture photo.

- Press **OK key** to take a photo.
- After capturing photo form the option menu you can send the photo as Multimedia messages, As Email, Via Bluetooth to different Bluetooth device, edit in photo editor or delete it.

RECORDING A VIDEO CLIP

You can access the video mode by using the following methods:

In standby mode, select Menu > Multimedia > Video recorder.

Long press of Camera is Video recording mode activated directly.

In video mode, you can do as follows:

- Press **LSK** to view video clips, or perform relevant settings.
- Press **OK key** to start or stop recording.

PLAYING A VIDEO CLIP

1. Select **Menu > Multimedia > Video player**.
2. Select a video clip and press **OK key** to open it.
3. Press **OK key** to start playing the video clip.





- During playing of the video clip, you can do as follows:
- Press **Up/Down direction key** to increase/decrease the volume.
 - Press **Left/Right direction key** to fast forward or rewind the video clip.
 - Press **OK key** to pause or resume.
 - 4. Press **RSK(Stop)** to stop playing the video clip.

LISTEN TO THE FM RADIO

Besides being used for listening to the radio, the headset cable functions as an antenna. To ensure normal listening of radio programs, do not plug out the headset or bind the headset cable.

- Connect a compatible headset to the phone.
- In standby mode press the FM key or **select Menu > Multimedia > FM radio**.
- Press **OK key** to stop or resume playing a radio program.
- Press **Up/Down direction key** to adjust the volume.
- Press **Left/Right direction key** to adjust the frequency with a precision of 0.1 MHz.
- Press and hold **Left/Right direction key** to adjust the frequency quickly.
- Switch to a channel by pressing the number key corresponding to the channel.
- Press **LSK(Options)** to view the channel list, manually input a frequency, automatically search for and set a channel, and perform relevant settings.

PLAYING MUSIC

1. In standby mode, press the MP3 key or select **Menu > Multimedia > Audio player** to launch the music player.
2. Press **OK key** to start playing music.

During music playing, you can do as follows:

 - Press **Up/Down direction key** to adjust the volume.
 - Press **Left/Right direction key** to switch music.
 - Press **LSK(Options)** to view the music list or perform relevant settings.

RECORDING AN AUDIO CLIP

1. Select **Menu > Multimedia > Sound recorder**.
2. Press **LSK(Options)** and then select **New record** to start recording.
3. During audio recording, press **LSK** to pause or resume.
4. Press **RSK(Stop)** to stop recording.



MELODY COMPOSER (COMPOSING A RINGTONE)

1. Select Menu > Multimedia > Melody compose.
2. Press LSK(Add) to access the Stave screen.
3. Press number keys to enter note and compose a ringtone.
Press RSK(Clear) to delete the note to the left of the cursor. Press and hold RSK (Clear) for about 3s to delete all notes.
4. Press RSK(Options) to select from the following options:
 - Play: to play the composed ringtone.
 - Play speed: to set the speed for playing the ringtone.
 - Select instrument: to select your favorite instrument for playing the ringtone.
5. After composing the ringtone, press RSK (Options) and then select Save.
6. Enter a name for the ringtone.
7. Press RSK (Options) and then select Done.



11 ORGANIZER

FILE MANAGER

You can use File Manager to organize your files in folders, in the phone and memory card. If a memory card is inserted, the files stored on it are organized separately. Select Phone or Memory card and then select Options to browse, copy, delete, and move files in folders. Depending on the size and type of memory card the read time will differ.

CALENDAR

You can use the phone's calendar to keep track of reminders, calls you need to make, meetings and birthdays. You can set the calendar to sound an alarm for your task.

Pressing the left soft key for "Option" which enables you to View Tasks, Add task, Jump To Date and Go to weekly view.

View : Enables you to view task's list and add tasks.

Add Event: Use Navigation keys for moving to the day you want and press Options to Add events. You can select task type such as: Reminder / Meeting / Course.

Jump to Date: Enables you to input a date to jump to a particular date.

Go to Weekly View: Enables you to access monthly view and weekly view.

TASKS

Task: you want Add Task. You can select task type such as: Date / Call / Anniversary

ALARM

You can set the device to sound an alarm at a desired time. The mobile Phone can set up to five alarms, and supports shutdown alarm.

Select **Menu > Organizer> Alarm**, to access the alarm.

To set the Alarm, select the time and set the Options: On /Off, Time, Repeat Type, Snooze time and Alert type. You can repeat the alarm Once, Everyday or as User Defined.

CALCULATOR

You can use your phone's calculator to add, subtract, multiply and divide.

Press the # key to enter decimal point.

Press the **up, down, left and right key** and **OK key** to select **+, -, x, /, +** and **=** respectively.

Press **Clear** to delete the figures.





CURRENCY CONVETER

You can use your phone for converting currency. You have to select the amount and currency to which it has to be converted

WORLD CLOCK

You can scroll to browse every city's time zone in the world map. The related date and time will be displayed at the bottom of the screen.

E-BOOK READER

Your phone can be used to read the books by storing them in *.txt file* format. It supports view of UCS-2, ASCII and UTF-8 encoding documents. Select **Menu** > **Organizer** > **E-Book Reader**, to access/read the books stored in your E-Book folder.

SYNCHRONIZATION

Synchronization your contacts, events, tasks, and notes that you to Server. your phone needs to be set up for Internet access. If you are using Internet or WAP with your phone for example to read e-mails, then the same settings should be fine for remote synchronization as well. The amount of data transferred during one synchronization session varies greatly with the number of contacts, events, tasks, and notes that you are synchronizing. you have to set the server address to which server you want to sync to the server.

PHONE SYNC

Sync your phone contacts to other compatible phones through Bluetooth.

STOP WATCH

Typical stopwatch

- Split Timing: Enables you to take intermediate timings in a sequence. To start the time observation, press Start. Press Split every time you want to record an intermediate time. To stop the time observation, press Stop. To start the time observation again, press Resume, the new time will be added to the previous time.
- Lap timing: To record repetitive lap timing, reset each period to zero. To start the time observation, press Start. Press Lap every time you complete a lap and want to reset time for the next lap. To start the time observation again, press Resume and the new time will be added to the previous time.



- View Record: Enables you to View, Add, Edit, Delete and Delete all the list of records.

nWay stopwatch

It offers to take the intermediate time for all the directions by pressing up/ down/ left/right key. The total time is displayed on the top of the screen.



12 FUN & GAMES

MSN

MSN Internet instant messenger for consumers using your mobiles phones. The software can track whether users are online and allow them to swap text messages between phones or between a cell phone and a PC. For this service, you require GPRS/EDGE service in your SIM.

Note: Only online contacts can be added.

SKYPE

Skype offers you the opportunity to send an instant message over GPRS/EDGE. With Skype, you can send your written message to anyone with a cell phone or Skype account. Sign in to your Skype account to send instant messages.

YAHOO MESSENGER

Yahoo messenger offer to send instant message over GPRS/EDGE. Sign in to your yahoo account to send instant messages to your buddies.

GAMES

Game interface offers option to select a game, the user can select the following games from the interface .refer help option games how to play.

Puzzle

Brick

Tetris





13 SETTINGS

PHONE SETTING

Select **Menu > Settings > Phone Settings**, to get access to these options:

Time and Date: Enables to set time and date by setting home city, time, date and format.

Schedule Power on /off : Enables to set the time for automatic power on/off.

Display : Enable to set display characters such as Wallpaper, Screen saver, Themes, Clock type.

CALL SETTING

Smart Divert settings: When user in call on the first numbers, on Incoming call of second number it will divert to first number if user activate the smart divert function. using smart divert setting you have to activate the Call waiting service in your both SIM1 and SIM2 card.

You have to enter the **SIM1** and **SIM2** mobile number is below menu.

Menu->setting -> Call setting -> Smart Divert settings->Numbers setting and Activate the services **Menu->setting -> Call setting -> Smart Divert settings->SIM1 setting/SIM2 setting -> Activate**.

* This function is based on service provider and diverting function might not work on inter service provider if they have not this services.

SIM1/SIM2 Call setting: This option enables you to set your caller ID by network, Call waiting, Call barring, line switching.

Voice Changer: Voice changer is the unique feature of the phone, which let you to change the voice. You can set the voice changer On/Off and select different kinds of voices.

Blacklist: This function enables you to add the number in the blacklist and activating. it enables you to block calls from that number

Background sound: This option enables you to play a background sound during an active call. You can also add your own sound.

Call time display: It enables you to power on/off the call time display.

Call time reminder: This function enables you to set the call time reminder as Single time or Periodic.

Auto quick end: It enables you to disconnect the current call automatically after certain duration of time. You can on/off this option and set the time between 1 and 9999 seconds

Reject by SMS: You can set the Reject by SMS option activating the features from





the menu->**Setting** ->**call setting** -> **Reject by SMS**.

Send an SMS to the caller, you can manually reject an incoming call from the option (LSK) of the call. Something like the SMS reply function, but just for manual rejects.

Security Setting

Phone lock: You can lock or unlock the phone. Enter the password to activate or deactivate the phone lock. When the phone is locked, you will be required to enter the phone password

Auto keypad lock: You can lock or unlock the phone keyboard and set the key lock time

Secure –info protection: Secure your personal data thorough the password
Your default password for these features is "0000".

Change password: This option lets you change the password of your phone.
Default password "0000".

Bluetooth

Through Bluetooth, you can synchronize data between a PC and your phone, exchange data with other Bluetooth devices, or use a Bluetooth headset.

Bluetooth:

For activate Bluetooth select **Menu->Setting -> Bluetooth->power on**.

Following option are available in Bluetooth menu.

Power on /off

Enquiry Audio device: search for devices

My device: display all the connected device

Setting: Configure setting of Bluetooth devices.

SYNCHRONIZING DATA

Before synchronizing data between a PC and your phone, ensure that the PC supports the Bluetooth function.

1. Select **Menu > Settings > Bluetooth > Power**. Then select On to enable the Bluetooth function.
2. Start the Bluetooth driver on the PC.
3. Pair the PC with the phone.

After pairing, you can synchronize data between the PC and the phone.





USING A BLUETOOTH HEADSET

No Bluetooth headset is delivered in the product package. If a Bluetooth headset is required, you can buy one yourself.

1. Select **Menu > Settings > Bluetooth > Enable**. Then select On to enable the Bluetooth function.
2. Select **Inquiry audio device** to search for available Bluetooth headsets.
3. After searching, press **LSK(Pair)**.
4. Enter the password for pairing the Bluetooth headset.
5. After the phone sets up a connection with the headset, the headset icon is displayed on the standby screen and you can use the headset in this case.

TRANSFERRING DATA

1. Select **Menu > Settings > Bluetooth > Enable**. Then select On to enable the Bluetooth function.
2. Select **My device > Inquiry new device** to search for available Bluetooth devices and then pair the phone with the desired device.

When a Bluetooth device sets up a connection with the phone for the first time, a pairing password needs to be entered for verification.

3. After pairing, you can transfer data between the phone and the Bluetooth device.

WEB CAM

Your phone can function as a webcam When the phone and the PC are powered on, after you connect the phone to the PC, you can have a video chat through the phone camera.

1. Connect the phone to the PC through the USB cable.
2. Set the USB mode to Webcam.
3. Start the browser on the PC to log in to a Web site.
Start the video tool installed on the PC to have a video chat





14 WARNINGS AND PRECAUTIONS

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the mobile safely. Read this information carefully before using your device.

ELECTRONIC DEVICE

Power off your device if using the device is prohibited. Do not use the device when it causes danger or interference with electronic devices.

MEDICAL DEVICE

- Power off your device and follow the rules and regulations set forth by the hospitals and health care facilities.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.
- Some wireless devices may affect the performance of the hearing aids. For any such problems, consult your service provider.

POTENTIALLY EXPLOSIVE ATMOSPHERES

Switch off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or fire, resulting in bodily injuries or even deaths. Do not switch on the device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. Also, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmosphere that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) if this device can be safely used in their vicinity.





TRAFFIC SECURITY

Observe local laws and regulations while using the device. Also, if using the device while driving a vehicle, please comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Switch off your device before boarding an aircraft. Using wireless devices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be considered illegal.

OPERATING ENVIRONMENT

- Do not use or charge the device in dusty, damp or dirty places or places with magnetic fields. Otherwise, the circuit may not function properly.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a thunder and stormy day, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Use accessories authorized by manufacturers. Using unauthorized accessories will render the warranty null and void.
- Keep the ambient temperature between 0 and 45 degree centigrade while the device is being charged. Keep the ambient temperature between -10 to 55 degree centigrade for using the device powered by battery.





PREVENTING HEARING DAMAGE

Using the receiver, ear buds, headphones, speakerphone, or earpieces at high volume can result in permanent hearing loss. Be extremely careful when listening at high decibel levels. Set the volume to a safe level. If you experience strange sounds in your ears like ringing or if you hear muffled speech, get your hearing checked. If you continue to use high volume, your hearing will soon get affected.

Hearing experts offer the following suggestions to protect your hearing:

- Reduce the time you use the receiver, earbuds, headphones, speakerphone, or earpieces at high volume.
- Do not increase the volume to block noisy surroundings.
- Reduce the volume if you cannot hear people speaking near you.

SAFETY OF CHILDREN

Please comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may prove dangerous, as it may present a choking hazard. Make sure that small children are kept away from the device and accessories.

ENVIRONMENT PROTECTION

Follow all the local regulations regarding the disposal of your devices or electrical accessories (such as chargers, headsets, or batteries). Recycle them. Do not dispose of an exhausted battery or a used device in a garbage can.

ACCESSORIES

Use only the accessories, such as the charger, battery, and headset, delivered by manufacturer. Using accessories of other manufacturers or vendors with this device model might invalidate any approval or warranty applicable to the device, might result in the non-operation of the device, and might be dangerous.

BATTERY AND CHARGER

- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and talk time are shorter than normal, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause fire or the charger may not function properly.





- If the ambient temperature is considerably low or high, the capacity and life of the battery is reduced. When the temperature is lower than 0°C, performance of the battery is affected.
- Do not connect two poles of the battery with conductors such as metal materials, keys or jewelries. Otherwise, the battery may be short-circuiting and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, make sure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If the battery is damaged, or the color changes or gets abnormally heated while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the lead is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to electric shock, short-circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.



CLEARING AND MAINTENANCE

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery and charger from water or vapor. Do not touch the device and charger with a wet hand. Otherwise, it may lead to short-circuit or malfunction of the device and electric shock to the user.
- Do not place your device, battery, or charger in places where it can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, or charger in a very hot or cold place. Otherwise, they may not function properly and may lead to a fire or an explosion.
- If the ambient temperature is considerably low or high, the capacity and life of the battery is reduced. When the temperature is lower than 0°C, performance of the battery is affected.



- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may get damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, manufacturer is not liable to pay for damages as the device and accessories are not covered by warranty.

EMERGENCY CALL

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.



15 DISCLAIMERS

Features and specification specified in this manual are subject to Change without prior notice. Certain mobile phone features may not be Activated by your service provider, and/or their network settings may limit the feature's functionality. Services and some features such as GPRS, E-mail may be dependent on the network, SIM card, as well as on the Compatibility of the devices used and the content formats supported, and may require network/service subscription/solutions. Data transfer Speeds are network dependent. You must use the same Bluetooth Profile to enable the Bluetooth devices to communicate with one another. To determine the profiles supported by other Videocon products, visit <http://www.videoconmobiles.com> For other devices, contact their respective manufacturers. Certain Bluetooth features including those listed may not be supported by all compatible Bluetooth enabled devices, and/ or the functionality of such features may be limited in certain devices, or certain wireless carriers. Always demand for original Videocon mobile phones to protect yourself from buying tinkered and/or used or tampered phones. Buy Videocon tested and Videocon certified compatible accessories and add-ons. The warranty is applicable only for Videocon phones, the company is not responsible for any loss or theft. Always use Videocon original Enhancements (including batteries) for safety. The use of any other type may invalidate warranty applicable to the mobile phone and can also be dangerous. The phone is designed to operate using Lithium ion batteries approved by the Videocon phone manufacturers. Using non approved batteries with the phone may result in poor performance and can cause damage to the phone or its enhancements or attachments. The display and products visualization here are for illustrative purposes only. All features, functionality and other product specifications are based on the latest available information and are correct at the time of printing, however such product specifications are subject to change without notice based on newer versions and enhancements. The unauthorized copying of copyrighted material is not legal and is inimical to the provisions of the Copyright Laws of India and other countries.

Kindly refer to <http://www.videoconmobiles.com> website for knowing newer versions of information provided in this manual, which might be of further use.

